










Carel IR33 Fault Codes

Code	Icon on the display	Alarm relay	Buzzer	Reset	Description
'rE'	 flashing	active	active	automatic	virtual control probe fault
'E0'	 flashing	OFF	OFF	automatic	room probe S1 fault
'E1'	 flashing	OFF	OFF	automatic	defrost probe S2 fault
'E2'	 flashing	OFF	OFF	automatic	probe S3 fault
'E3'	 flashing	OFF	OFF	automatic	probe S4 fault
'_'	no	OFF	OFF	automatic	probe not enabled
'LO'	 flashing	active	active	automatic	low temperature alarm
'HI'	 flashing	active	active	automatic	high temperature alarm
'IA'	 flashing	active	active	automatic contact	immediate alarm from external contact
'dA'	 flashing	active	active	automatic	delayed alarm from external contact